


**Notes**

1. Allow plus tolerance for clearance per ANSI A115.2.
2. Lock and latch case support by door manufacturer.
3. Prepare for a #8-32 screw.
4. Plaster guard by door manufacturer.

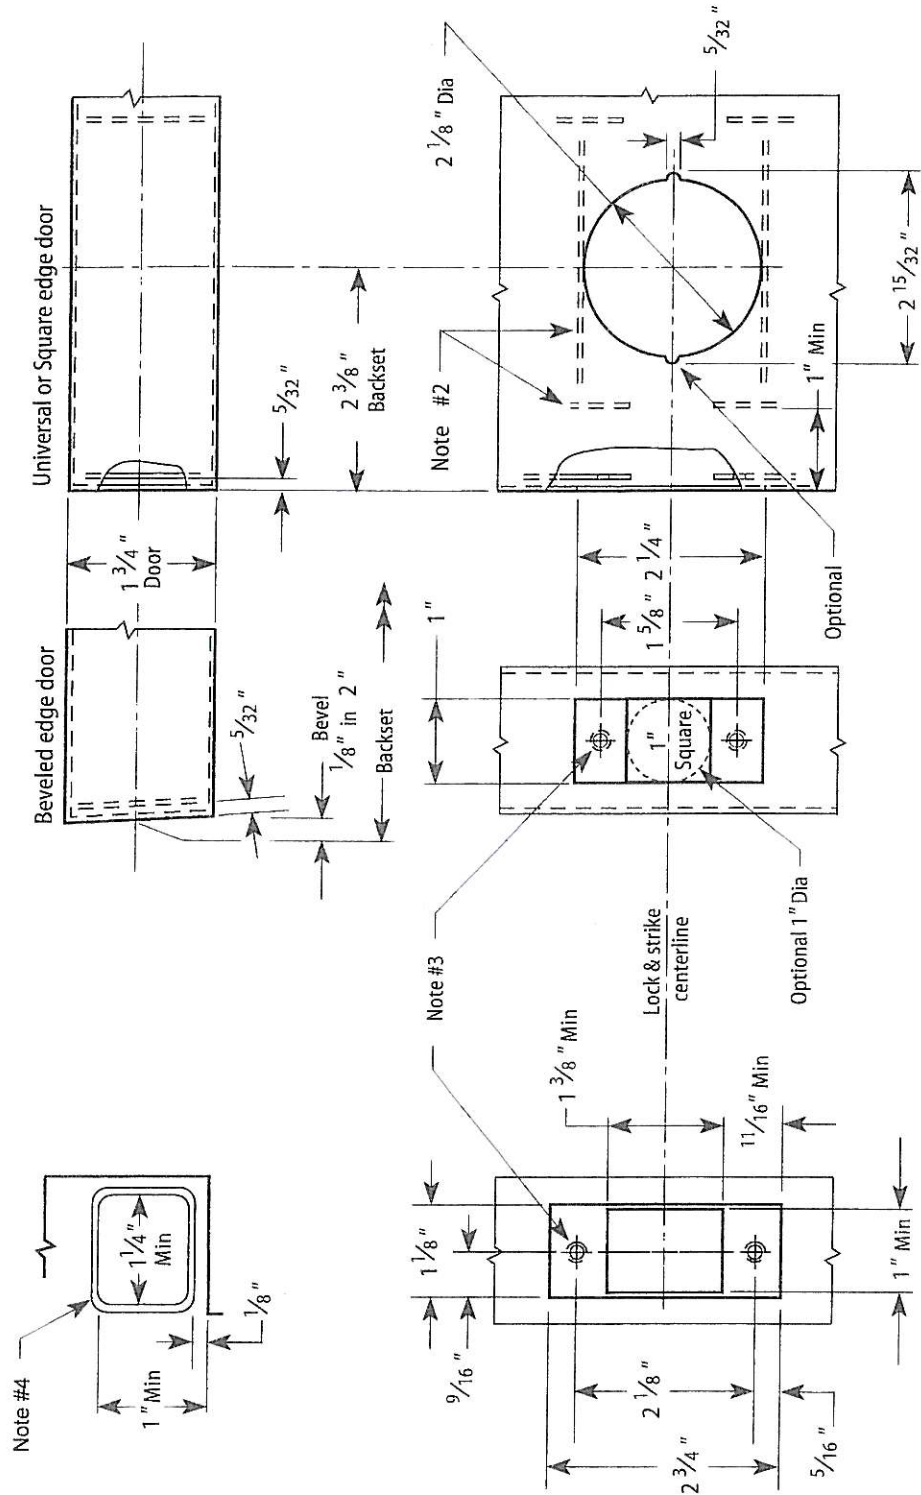

2 3/8" Backset Door Preparation

Frame Preparation

<p>Title  <b>Installation Specification Template for MBT &amp; MBT2          Tubular Deadbolt Locks with Standard Strike</b></p>		
<p>Series:  <b>MBT &amp; MBT2</b></p>	<p>Backset:  <b>2 3/8"</b></p>	<p>Door Thickness:  <b>1 3/8" - 2"</b></p>



**Marshall Best Security**